




\*\*\*\*\*inv opamp simulate\*\*\*\*\*

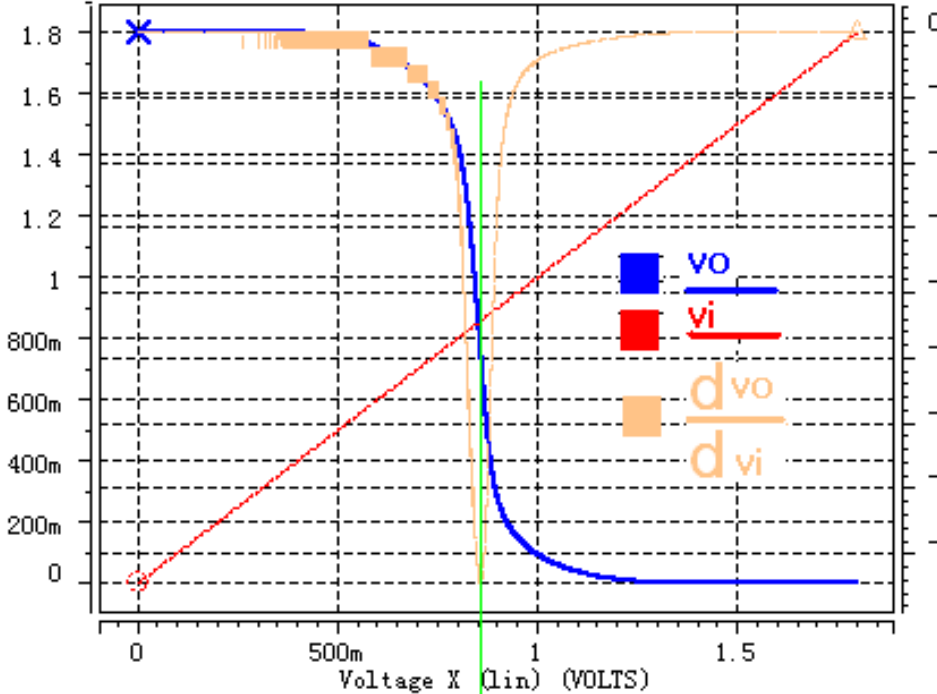

! bias input at this point we can get the largest gain

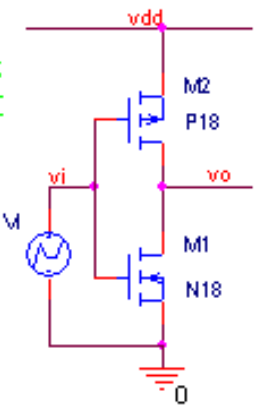

\*\*\*\*\*diff opamp simulate\*\*\*\*\*

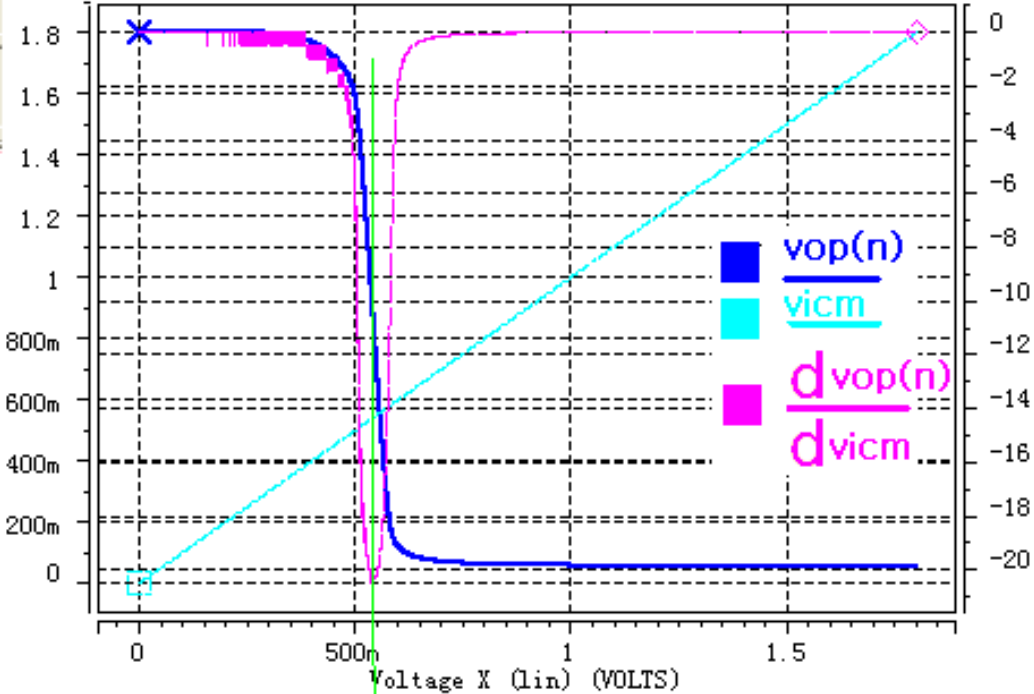

? bias input at this CM voltage to get the largest gain?

but the CMRR is low. Where is the best point for 'vicm' ?

